


Parts Description / Accessories Name

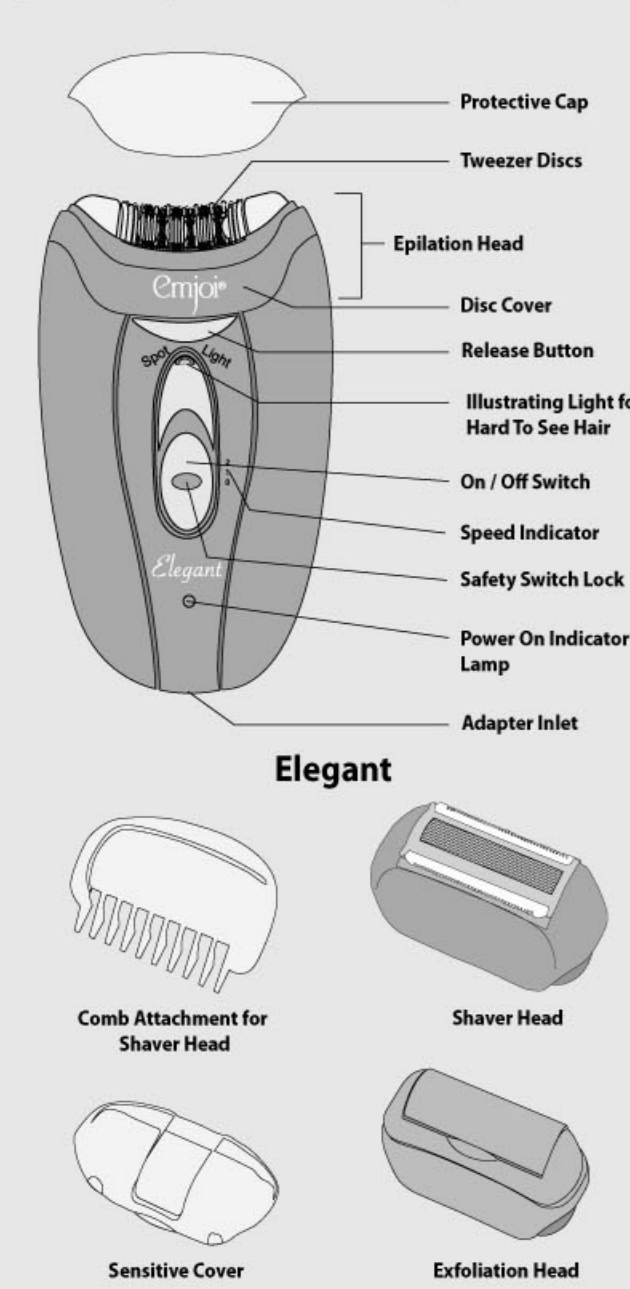

Instruction for use

For ultimate results take a warm bath or shower and use a loofa or exfoliation cream, in small circles to remove dead skin and open pores. Doing this before you use your **Emjoi® Elegant** will help to make the hair removal process more comfortable.

1. Insert plug into base of unit.

2. Place the adapter into the socket and charge for at least 16 hours, initially. Then charge for 8-16 hours as needed. If your unit is not charged the unit can be used while being plugged in.

3. Remove the plastic protective cap.

4. To turn On the unit, press the safety switch lock and at the same time slide it up to the desired speed. The unit has 2 speeds:
0 Power "OFF"
1 Low speed for fine hair
2 High speed for coarse hair

5. The massaging fingers (on the disc cover) minimize pain during epilation.

6. Hold the unit in your palm, at a 90° angle, so the **Emjoi®** logo is facing you. Do not apply pressure; just glide the unit over the surface of the skin.

7. Use short, quick, brush like or sweeping motions in the direction of hair growth.

8. Take extra care to extend the leg before removing hair from behind the knee.

9. May be used for the bikini area (hold the skin taut with one hand).

10. Can be used to remove **individual** hairs from the upper lip and chin area.

11. May be used to remove hair from underarms (extend your arm so skin is stretched taut).

12. **Sensitive Cover**
Use the sensitive cover on your unit when removing hair in sensitive areas, place the sensitive cover onto the unit until it clicks into place. After use, remove the sensitive cover and replace it with the protective cap.

13. To clean: Turn the unit off. Gently brush the tweezer discs to remove any hair.

14. Press the release button on the front of the unit to remove the head.

15. Squeeze the lower part of disc cover on both ends in one hand, and use your thumb of another hand to push the disc assembly down and out of the disc cover.

16. Gently brush the tweezer discs to remove any hair.

17. Replace the disc assembly into the disc cover by pressing lightly until it clicks into place and ensure the disc assembly are fixed well with the four hooks at the bottom of the disc cover.
Note: Be sure that the window of disc cover lines up with the shape of the disc assembly.

18. Replace the epilation head onto the unit by pressing until it clicks into place by lining up the teether wheel on the unit and the epilation head.

19. **Shaving Attachment**
Changing the Shaving Attachment: Turn off the unit. Remove the epilation head by pressing the release button on the front of the unit until it clicks into place, by lining up the teether wheel on the body and the attachment. Place the comb attachment (with comb facing to the front) onto the shaver head until it clicks into place. The comb attachment is for trimming hair short before epilation.
Note: If the shaver head is not in use, please always attach the comb attachment onto the shaver head for protection.

20. Remove the shaver head from the unit by pressing the release button on the front of the unit.

21. Remove the blade and trimmer assembly from the shaver head.

22. Clean the trimmer with the cleaning brush.

23. Gently shake the blade and trimmer assembly to remove the hair.

24. Replace the blade and trimmer assembly onto the shaver head by pressing until it clicks into place.

25. Replace the shaver head onto the unit by pressing until it clicks into place.

26. **Exfoliation Attachment**
Changing the exfoliation attachment: Turn off the unit. Remove the epilator head by pressing the release button on the front of the unit. Place the exfoliation head onto the unit until it clicks into place, by lining up the teether wheel on the body and the attachment.

27. The light will turn on automatically when the unit is in use.

28. To turn On your unit, press the safety switch lock and at the same time slide it up to the desired speed. Low is recommended for fine hair and high is recommended for coarse hair.

29. Remove the shaver head from the unit by pressing the release button on the front of the unit.

30. Remove the blade and trimmer assembly from the shaver head.

31. Clean the trimmer with the cleaning brush.

32. Gently shake the blade and trimmer assembly to remove the hair.

33. Replace the blade and trimmer assembly onto the shaver head by pressing until it clicks into place.

34. Replace the shaver head onto the unit by pressing until it clicks into place.

35. The light will turn on automatically when the unit is in use.

36. To turn On your unit, press the safety switch lock and at the same time slide it up to the desired speed. Low is recommended for fine hair and high is recommended for coarse hair.

37. Remove the shaver head from the unit by pressing the release button on the front of the unit.

38. Remove the blade and trimmer assembly from the shaver head.

39. Clean the trimmer with the cleaning brush.

40. Gently shake the blade and trimmer assembly to remove the hair.

41. Replace the blade and trimmer assembly onto the shaver head by pressing until it clicks into place.

42. Replace the shaver head onto the unit by pressing until it clicks into place.

43. The light will turn on automatically when the unit is in use.



Before using your Emjoi® Elegant, please read all these instructions carefully and completely.

The **Emjoi® Elegant** is a terrific hair remover with 36 tweezer action discs to ensure rapid, non-irritating and virtually painless hair removal from the root. With its glide technology and massaging finger attachment removing hair from the root has never been easier or more comfortable. The **Emjoi® Elegant** removes hair as short as 0.5 mm on the face, legs, bikini line and underarms leaving skin super smooth for up to 6 weeks. It features built in lifetime antimicrobial protection against damaging bacteria by Silver Ion Technology. With the sensitive cover, shaver head and exfoliation head the **Emjoi® Elegant** is the complete hair removal solution.

When using an epilator for the first time we suggest that you test the unit on an area that has light hair growth in order to get accustomed to the epilation process.

Caution

Do not store or use your **Emjoi® Elegant** where it can fall into a tub or sink of water. Do not reach for your unit if it has fallen into water, immediately unplug it.

Note: The **Emjoi® Elegant** is a rechargeable hair remover that can be used as a rechargeable device without the cord or with cord by connecting it to an electrical outlet. Your unit cannot be turned ON if the cord is plugged into the unit but not into the electrical outlet. Before using the **Emjoi® Elegant** for the first time as a rechargeable device, it should be charged for, at least, 16 hours.

Note: The red light on the front of the unit will light up when the unit is charging. It is recommended that you recharge your unit for 8-16 hours after each use so your unit is always charged when you need it. To preserve and extend the life of the battery it is recommended to occasionally discharge the battery, let the charge run out completely, and then recharge it.

Caution

Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.

Instructions for use

For best results: Take a warm bath or shower, to open up your pores, and use a loofa or exfoliation cream in small circles to exfoliate and remove dead skin from the area you wish to remove hair. Doing this before you use your **Emjoi® Elegant** will cleanse and make your skin pliable, so removing hair will be less uncomfortable.

1. Use your **Emjoi® Elegant** in a location that has a comfortable temperature to avoid perspiration.
2. Make sure that the areas you wish to remove hair from are clean, dry and free from moisturizing cream or oil.
3. After your unit is charged remove the adaptor plug from the adaptor inlet at the bottom of the unit. If your unit is not charged, insert the adaptor plug into the adaptor inlet and plug your adaptor into the electrical outlet.
4. Remove the protective cap, by gently pulling, from your **Emjoi® Elegant**.
5. To turn On your unit, press the safety switch lock and at the same time slide it up to the desired speed. Low is recommended for fine hair and high is recommended for coarse hair.
0 Power "OFF"
1 Low speed
2 High speed
6. Hold the unit in your palm, at a 90° angle, so the **Emjoi®** logo is facing you.
7. Position your **Emjoi® Elegant** so that the discs are upright, the **Emjoi®** logo should be facing you.
8. To minimize discomfort, hold the skin taut surrounding the area you are removing hair from.
9. Gently glide the **Emjoi® Elegant** in short, quick, brush like or sweeping strokes in the direction of hair growth.

Note: For your protection, your **Emjoi® Elegant** may slow down, or stop operating completely if it is pressed too hard against the skin.

10. Before removing hair from the bikini line and underarms it is important to use a loofa or exfoliation cream in a warm shower or bath to remove dead skin and prevent ingrown hairs. If it has been an extended amount of time since you have removed hair from your bikini line and underarms, trim the hair with a scissor or trimmer. Make sure to hold your skin taut with one hand while removing hair.

11. The **Emjoi® Elegant** is only intended to remove single hairs from the upper lip and chin. Hold area taut and use a small brushing motion. Do not use like an electric shaver on your entire face!

12. Repeat within each area until all unwanted hair is removed. The time required to remove unwanted hair depends on the user's hair type.

13. After each use clean your **Emjoi® Elegant**.

14. Keep the protective cap on your unit when it is not in use.

Cleaning

Before cleaning, make sure to turn off your unit and if you have it plugged in, unplug it from the electrical outlet.

1. Before cleaning, make sure to turn off your unit and unplug it from the electrical outlet.
2. Remove the protective cap on the unit. Using the brush, enclosed, gently brush the tweezer discs to remove any hair.
3. To clean the individual head, remove the epilation head by pressing the release button on the front of the unit. Squeeze the lower part of disc cover on both ends in one hand, and use your thumb of other hand to push the disc assembly down and out of the disc cover. Gently brush the tweezer discs to remove hair on all sides of the discs.
4. Replace the disc cover by gently pressing until it clicks into place. Ensure the disc assembly are fixed well with the four hooks at the bottom of the disc cover.
5. Replace the epilation head onto the unit by pressing until it clicks into place.

Note: When placing the epilation head onto the unit, make sure that the teether wheel on the unit and the teether wheel on the epilation head line up.

To Remove Residue:

To remove residue from the tweezers, use rubbing alcohol on the tip of the tweezers with a cotton swab that has been squeezed dry.

Using The Shaving Attachment

1. Remove the epilation head by pressing the release button on the front of the unit.
2. Put the shaver head on the unit until it clicks into place.
Note: When placing the shaver head into the unit, make sure that the teether wheel on the unit and the teether wheel on the shaver attachment line up.
3. Hold the **Emjoi® Elegant** at a slight angle to skin and gently move it against the direction of the hair growth allowing the foil to trap the hair and smooth away any stubble.
Note: If the shaver head is not in use, please always attach the comb attachment onto the shaver head for protection.
4. Attach the comb attachment on the shaver head to trim hair short before epilation.

Cleaning The Shaving Attachment

1. Remove the comb attachment.
2. Remove the shaver head from the unit by pressing the release button on the front of the unit.
3. Removing the blade and trimmer assembly from the shaver head.
4. Clean the trimmers with cleaning brush.
5. Gently shake the blade and trimmer assembly to remove hairs accumulated inside the assembly.
6. Replace the blade and trimmer assembly onto the shaver head by pressing until it clicks into place.
7. Replace the shaver head onto the unit by pressing until it clicks into place.
Note: When placing the shaver head onto the unit, make sure that the teether wheel on the unit and the teether wheel on the shaver head line up.
8. Replace the comb attachment onto the shaver head.

Using The Exfoliation Attachment

1. Make sure that your **Emjoi® Elegant** is in the "Off" position.
2. Press the release button on the front of the unit and gently pull off the epilation head.
3. Place the exfoliation attachment into the unit by pressing until it clicks into place.
Note: When placing the exfoliation attachment into the unit, make sure that the teether wheel on the unit and the opening of the exfoliation attachment line up.
4. Select the exfoliation pad you want (pink for face and grey for body). The kit includes 3 pink and 3 grey exfoliation pads.
5. Hold the **Emjoi® Elegant** at a 90° angle to the skin. Gently move it against your skin allowing the exfoliation cartridge to smooth away any rough skin.

Changing The Exfoliation Attachment

1. Make sure that your **Emjoi® Elegant** is in the "Off" position.
2. Remove the used exfoliation attachment (small cartridge on top of the exfoliation attachment above the plastic head) by holding the exfoliation attachment in one hand and with your other hand gently pull off the exfoliation cartridge.
Note: To easily remove the cartridge use the finger grooves on the front and back of the exfoliation head.
3. Choose the new exfoliation cartridge you want (Pink for face and Grey for body) and press it into place.

Cleaning The Exfoliation Attachment

1. It is recommended to clean the exfoliation attachment after each use. Use the cleaning brush, enclosed, to gently brush off any debris or dust from the unit.

Warning / Important

- Before using your hair remover please read all these instructions carefully and completely.
- Use the **Emjoi® Elegant** only for purposes described in this instruction book.
- Children should be supervised to ensure that they do not play with this appliance.
- Please keep these instructions for future reference.
- This unit is intended for one person. We discourage sharing the unit with others.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Warning** - To reduce the risk of burns, fires or electric shock, never leave your **Emjoi® Elegant** unattended when plugged in.
- Household use only.
- Do not use an extension cord with this unit.
- Keep the appliance dry.
- This unit is for dry use only.
- Always charge your unit in a cool, dry place.
- Do not place or store the unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0 - 40°C.
- Do not store your unit where it can fall into a tub or sink of water.
- **Warning** - Do not use your **Emjoi® Elegant** while bathing or in the shower. Your **Emjoi® Elegant** is not waterproof or water resistant and is not intended to be used near water, in the bathtub or in the shower.
- Do not place your unit in water or drop water into your unit.
- Do not reach for your unit if it has fallen into water. Immediately unplug the unit.
- The **Emjoi® Elegant** can be used with the adapter supplied with the unit, after being plugged into an electric outlet or used without the adapter when it is fully charged. Prior to using the unit for the first time cordless it needs to be charged for 16 hours.
- When the unit is used with the adapter, place the adapter into the unit and then into the electrical outlet. Make sure the plug is inserted firmly into the appliance. When you are finished using your unit turn the unit "OFF" and then remove the adapter from the electrical outlet and then from the unit.
- Always unplug your unit when it is not in use, unless it is being recharged, and before cleaning.
- Do not wrap the cord of your adapter around the unit.
- Keep the cord of the adapter away from hot surfaces.
- Never use your unit if the adapter cord or electrical outlet is damaged.
- Do not cut off the adapter to use it with another plug as this can be a hazardous situation.
- Only use your **Emjoi® Elegant** with the adapter supplied with the unit. For questions regarding your adapter in the US contact 1-888-99EMJOL, M-F, 9-5 EST.
- **Caution:** Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.

Do not use this unit if the epilation head is damaged as this could lead to injury.

- Never use your unit if it has been damaged or dropped into water.
- Do not use your unit if it has damaged or broken tweezer discs as injury may occur.

- Do not drop or insert anything into any openings of the unit.
- Do not use your unit outdoors.
- Do not use your unit where aerosol products or oxygen is being used.
- Keep your unit out of reach of children.
- This appliance is not to be used on, by or near children or invalids.
- Only use this unit on clean, dry, lotion free skin.
- Do not use water or any other liquid on the tweezers other than rubbing alcohol.

To prevent accidents and injury to you or damage to the unit - when your **Emjoi® Elegant** is in use, keep it away from the hair on your scalp, your eyebrows, eyes/lashes as well as clothes, brushes, wires, cords, shoelaces etc.

Do not use the **Emjoi® Elegant** if you have - allergic or sensitive skin that reacts to cosmetics, metals, clothing, etc., acne, body acne, warts, around moles and loose skin, diabetes, Raynaud's disease, eczema, psoriasis, hemophilia, immune deficiency, rosacea, couperose, varicose veins, wounds or when your skin has rashes or is sunburned, inflamed or irritated. Consult with your health care provider prior to use if you have any of the above conditions.

Do not use the unit before or during menstruation, during pregnancy or for one month after giving birth unless you consult with your health care provider prior to use.

Changes in your hormone levels (taking hormone medication, recently pregnant) can influence the color or thickness of hair growth. These changes are not caused by this product but hormonal changes.

If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product.

If you have a pacemaker consult with your health care provider prior to use.

If you are epilating for the first time, we recommend doing it in the evening so any possible redness or irritation can go away overnight. We suggest testing the unit gradually over a period of two to three days to allow your skin to adjust.

If you have never epilated before (or if it has been an extended time since you epilated) you will feel a prickling sensation when using the unit. This feeling is due to the fact that you are removing hair from the root. After a few sessions the sensation you feel should diminish.

Removing hair from the root can cause ingrown hair and skin irritation (redness of the skin, discomfort, itching). If you know that you are prone to ingrown hair, removing hair from the root may not be for you. Regular skin massaging with a massaging glove or loofa, may help reduce the chance or occurrence of ingrown hairs. After using the epilator you can use body cream or aloe vera to soothe the skin and any possible irritation.

Sometimes inflammation of the skin can occur when bacteria penetrates the skin. Cleaning the epilating head before and after each use can minimize the risk of infection.

The **Emjoi® Elegant** is only intended to remove single hairs from the upper lip and chin. Hold area taut and use a small brushing motion. The **Emjoi® Elegant** is NOT an electric shaver and should NOT be used like an electric shaver on your entire face! Using the **Emjoi® Elegant** like an electric shaver, without holding the skin taut, could potentially allow the **Emjoi® Elegant** to pinch or grab the skin, which could cause irritation and skin damage.

Before removing hair from the bikini line and underarms it is important to use a loofa sponge or exfoliation cream in a warm shower or bath to remove dead skin and help minimize the chance or occurrence of ingrown hairs. If it has been an extended amount of time since you have removed hair from your bikini line and underarms (if the hair is longer than 5mm), trim the hair with a scissor or trimmer. Make sure to hold your skin taut with one hand while removing hair. Some women may experience irritation after removing hair from the underarms and bikini line for the first time. We suggest testing the unit on a small part of the skin in these areas first.

Do not continually rub the unit on the same area or apply strong pressure. Keep the protective cap on your unit when it is not in use.

Frequently asked questions

Q: Does the **Emjoi® Elegant** hurt?
A: The first time you use the **Emjoi® Elegant** you might feel a prickling sensation, this feeling is due to the fact that you are removing hair from the root. After several uses, the tweezing becomes more comfortable even for those with sensitive skin.

Q: How should I hold the **Emjoi® Elegant**?
A: To minimize discomfort, hold the skin surrounding the area you are removing hair from taut. Gently glide, do not apply pressure, the **Emjoi® Elegant** in short, quick, brush like or sweeping strokes in the direction of hair growth.

Q: Do I have to use my **Emjoi® Elegant** with the adapter?
A: No. Since you have the rechargeable **Elegant** you can charge it and use it cordless or plug it in and use it with the cord.

Q: How long should I charge my unit?
A: Initially charge your unit for 16 hours before the first use. After each use charge your unit for 8-16 hours so it is always charged when you need it.

Q: Can I use the **Emjoi® Elegant** on my upper lip?
A: Yes, the **Emjoi® Elegant** is perfect for removing individual hairs from the upper lip.
Important: Hold your upper lip taut and use short brushing strokes to remove **individual** hairs from your upper lip.

Warranty

The **Emjoi® Elegant** warranty against defects in material and workmanship lasts one year from the date of purchase.

Keep original receipt for warranty service.

During this warranty period, return the product to Emjoi, Inc. with proof of purchase to FDR Station, PO Box 7406, New York, NY 10150. Emjoi will take care of repair, or at their discretion, replacement of a defective unit without charge. For questions regarding this policy you may call toll free 1-888-99-EMJOL (1-888-993-6564).

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center. The manufacturers and distributors of the **Emjoi® Elegant** do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

Model No. AP-17UDR
US Patent No. 5,976,157
Other Patents Pending
© Soft Lines International Ltd. 2010

www.emjoi.com PK-IB-EMJ-17UDR-03-0



Rechargeable

Instructions for use

For best results: Take a warm bath or shower, to open up your pores, and use a loofa or exfoliation cream in small circles to exfoliate and remove dead skin from the area you wish to remove hair. Doing this before you use your **Emjoi® Elegant** will cleanse and make your skin pliable, so removing hair will be less uncomfortable.

1. Use your **Emjoi® Elegant** in a location that has a comfortable temperature to avoid perspiration.
2. Make sure that the areas you wish to remove hair from are clean, dry and free from moisturizing cream or oil.
3. After your unit is charged remove the adaptor plug from the adaptor inlet at the bottom of the unit. If your unit is not charged, insert the adaptor plug into the adaptor inlet and plug your adaptor into the electrical outlet.
4. Remove the protective cap, by gently pulling, from your **Emjoi® Elegant**.
5. To turn On your unit, press the safety switch lock and at the same time slide it up to the desired speed. Low is recommended for fine hair and high is recommended for coarse hair.
0 Power "OFF"
1 Low speed
2 High speed
6. Hold the unit in your palm, at a 90° angle, so the **Emjoi®** logo is facing you.
7. Position your **Emjoi® Elegant** so that the discs are upright, the **Emjoi®** logo should be facing you.
8. To minimize discomfort, hold the skin taut surrounding the area you are removing hair from.
9. Gently glide the **Emjoi® Elegant** in short, quick, brush like or sweeping strokes in the direction of hair growth.

Note: For your protection, your **Emjoi® Elegant** may slow down, or stop operating completely if it is pressed too hard against the skin.

10. Before removing hair from the bikini line and underarms it is important to use a loofa or exfoliation cream in a warm shower or bath to remove dead skin and prevent ingrown hairs. If it has been an extended amount of time since you have removed hair from your bikini line and underarms, trim the hair with a scissor or trimmer. Make sure to hold your skin taut with one hand while removing hair.

11. The **Emjoi® Elegant** is only intended to remove single hairs from the upper lip and chin. Hold area taut and use a small brushing motion. Do not use like an electric shaver on your entire face!

12. Repeat within each area until all unwanted hair is removed. The time required to remove unwanted hair depends on the user's hair type.

13. After each use clean your **Emjoi® Elegant**.

14. Keep the protective cap on your unit when it is not in use.

Cleaning

Before cleaning, make sure to turn off your unit and if you have it plugged in, unplug it from the electrical outlet.

1. Before cleaning, make sure to turn off your unit and unplug it from the electrical outlet.
2. Remove the protective cap on the unit. Using the brush, enclosed, gently brush the tweezer discs to remove any hair.
3. To clean the individual head, remove the epilation head by pressing the release button on the front of the unit. Squeeze the lower part of disc cover on both ends in one hand, and use your thumb of other hand to push the disc assembly down and out of the disc cover. Gently brush the tweezer discs to remove hair on all sides of the discs.
4. Replace the disc cover by gently pressing until it clicks into place. Ensure the disc assembly are fixed well with the four hooks at the bottom of the disc cover.
5. Replace the epilation head onto the unit by pressing until it clicks into place.

Note: When placing the epilation head onto the unit, make sure that the teether wheel on the unit and the teether wheel on the epilation head line up.

To Remove Residue:

To remove residue from the tweezers, use rubbing alcohol on the tip of the tweezers with a cotton swab that has been squeezed dry.

Using The Shaving Attachment

1. Remove the epilation head by pressing the release button on the front of the unit.
2. Put the shaver head on the unit until it clicks into place.
Note: When placing the shaver head into the unit, make sure that the teether wheel on the unit and the teether wheel on the shaver attachment line up.
3. Hold the **Emjoi® Elegant** at a slight angle to skin and gently move it against the direction of the hair growth allowing the foil to trap the hair and smooth away any stubble.
Note: If the shaver head is not in use, please always attach the comb attachment onto the shaver head for