

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance)

DANGER

-To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
3. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
4. Unplug this appliance before cleaning.
5. Charger unit is not for immersion or for use in shower.
6. Do not use as extension cord with this appliance.

WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken Blade, as facial injury may occur.
9. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off" then remove plug from outlet.
10. Charger unit is not for immersion or for use in shower.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off" then remove plug from outlet.

SAVE THESE INSTRUCTIONS

P. 8

WARNING / IMPORTANT

- Please keep these instructions for future reference.
- The **Emjoi® RotoShave** is a Men's shaver for shaving beards and not for the arm and leg.
- The **Emjoi® RotoShave** is not for women.
- This unit is intended for one person. We discourage sharing the unit with others.
- The **Emjoi® RotoShave** can be used in the shower and rinsed under running tap water. **Do not submerge the unit in water.**
- Do not attempt to disassemble the unit by yourself.
- Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.
- The blade is thin and precision manufactured do not press it to your skin with excessive force or hit the 9-blade roller with a sharp object.
- Only use the **Emjoi® RotoShave** adapter or base with your unit. Do not use any other adapter as this could damage your unit.
- Household use only.
- Do not use an extension cord with this unit.
- Keep the appliance dry.
- Always charge your unit in a cool, dry area.
- Do not place or store the unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0°C and 40°C.
- Do not use or leave the unit in direct sunlight near heaters, or in hot areas.

P. 9

- Do not immerse the shaver body in water on purpose. This may cause the unit to malfunction.
- The **Emjoi® RotoShave** can be charged with its adapter cord or on its charging base. Before using the unit for the first time or if it has not been used for a long period of time it needs to be charged for 4 hours. **NOTE Emjoi® RotoShave cannot be operated when it is being charged.**
- **Caution:** Before plugging into an electrical outlet, make sure that the adapter is appropriate for the local voltage. This is extremely important when traveling overseas.
- **Warning:** Do not touch the release button on the side of the head while shaving as it will release the 9-blade roller. Only press the release button when the unit is turned Off, unplugged from the electrical outlet and you are replacing the 9-blade roller.
- Recharge only within the rated voltage.
- Do not wrap the cord around the unit or charging base to prevent possible damage to the cord.
- Do not wrap with cloth or blankets during charging.
- When the unit is recharged with the adapter, place the adapter into the unit and then into the electrical outlet. Make sure that the plug is inserted firmly into the appliance. When you are finished recharging your unit, remove the adapter from the electrical outlet and then from the unit.

P. 10

- When you unplug your unit please pull on the plug and not on the cord.
- Do not use the adapter with the unit while bathing or in the shower and avoid recharging in humid places as contact of the inner mechanism with water may cause the unit to breakdown and may cause the risk of burns, fires or electric shock.
- Do not drop the **Emjoi® RotoShave** while your hands are lathered and wet as it can cause harm if the unit cuts your body and can cause damage to the unit.
- Take extra care when replacing the 9-blade roller as not to touch the blades with your fingers as this can result in cutting the skin.
- **Warning:** Replace the 9-blade roller as needed. A 9-blade roller with worn and nicked edges could cause damage to the skin.
- Do not use the 9-blade roller if the blades or Spiral Windings are damaged. If they are damaged replace immediately.
- Do not touch the charging adapter if your hands are wet.
- Do not turn your unit On if the 9-blade roller is not attached.
- Do not wrap the cord of your adapter around the unit.
- Keep the unit, the adapter and the cord of the adapter away from hot surfaces.
- Never use your unit if the adapter cord or electrical outlet is damaged.

P. 11

- Do not cut off the adapter to use it with another plug as this can be a hazardous situation.
- Do not use the charging adapter if any part of the charging adapter is damaged.
- Only use your **Emjoi® RotoShave** with the adapter supplied with the unit. For questions regarding your adapter in the US contact 1-888-99EMJOI, M-F, 9-5 EST.
- Before the 9-blade roller is removed from the shaver body, turn the unit Off.
- Do not throw or damage the unit.
- In case of malfunction, unplug the unit immediately and refrain from use.
- Do not use this unit if the 9-blade roller is damaged as this could lead to injury.
- Never use your unit if it has been damaged or submerged into water.
- Keep your unit out of reach of children.
- This appliance is not to be used on, by or near children or invalids.
- **To prevent accidents and injury to you or damage to the unit - when your Emjoi® RotoShave is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes as well as clothes, brushes, wires, cords, shoelaces etc.**
- If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product.

P. 12

Warranty


The **Emjoi® RotoShave** warranty against defects in material and workmanship lasts one year from the date of purchase.

Keep original receipt for warranty service.

During this warranty period, return the product to Emjoi, Inc. with proof of purchase to FDR Station, PO Box 7406, New York, NY 10150. Emjoi will take care of repair or at their discretion, replacement of a defective unit without charge. For questions regarding this policy you may call toll free 1-888-99-EMJOI (1-888-993-6564).

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center. The manufacturers and distributors of the **Emjoi® RotoShave** do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

Model No. AP-3RS
Patent No. 6, 442, 840
6, 305, 084
6, 055, 731
Other patents issued and pending
Printed in China
© Wheel Technology, Inc. 2008

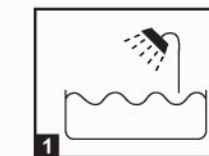

PK-IB-EMU-3RS-01-1

www.emjoi.com

P. 13

GENERAL DESCRIPTION OF PARTS



P. 1



The **Emjoi® RotoShave** is a ground breaking rechargeable razor that combines the ease of use and convenience of an electric shaver with the closeness and efficiency of a razor blade. 9 rotating blades at about 30 revolutions per second (an amazing 270 times per second) touch the skin leaving you with a closer faster, and smoother shave. The **Emjoi® RotoShave** is equipped with patented safety guards and patented spiral windings. The combination of these safety features help to minimize irritation and virtually eliminates nicks and cuts leaving the skin smoother than other electric or manual shaving methods.

Rotoshave is a shaving appliance the hand-held part of which may be used in a bath or a shower (see Page 13 Fig.1)

P. 2

Before using your **Emjoi® RotoShave**, please read this instruction manual carefully and completely.

INSTRUCTIONS FOR USE

When you use your unit for the first time or if you have not used it for a long period of time, charge your unit approximately 4 hours before use.

Even if you do not use the unit for a long period of time, please be sure to charge the unit every half year to avoid the complete self-discharge.


The **Emjoi® RotoShave** can be charged two different ways. Plug the adapter cord into the unit and then into the electrical outlet (Fig.2) or plug the adapter cord into the charging stand and put the unit in the stand for charging (Fig.3).

Note: Either way you decide to charge your Emjoi® RotoShave the unit cannot be operated when it is being charged.

1. Make sure the unit is turned Off. Connect the adapter to the bottom of the unit (Fig.4).
2. The green light on the charging indicator will light up (Fig.5). Charge your unit for approximately 1 hour (standard charging time).

Note: When you use your unit for the first time or if you have not used it for a long period of time, charge the unit for approximately 4 hours before use.

P. 3

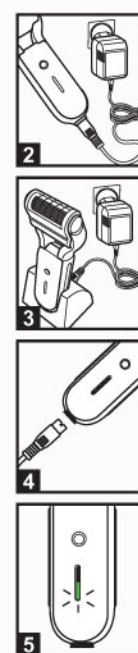

3. When fully charged the green light on the charging indicator will blink. With a full charge the **Emjoi® RotoShave** can be used for 30 minutes approximately.

4. When your unit has the battery capacity for at least one shave left the low battery indicator will turn red and blink (Fig.6).

Confirm the voltage available at each overseas location before using the appliance.

TO SELECT MOTOR POWER

Select motor power according to your needs by pushing the motor power selector (Fig.7) as below.

One push - switch **On and Low** mode for average growth

Two pushes - change to **High** mode for heavy growth

Three pushes - switch **Off**

P. 4

SHAVING

The **Emjoi® RotoShave 9-blade roller is made of patented razor blades. Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.**

Important: You must use shaving gel or foam (not containing silicon) while using this unit. Shaving gel or foam containing silicon should not be used with the Emjoi RotoShave as it may cause defects to the unit. Dry shaving is forbidden.

Important: Please confirm no malfunction on the 9-blade roller before use. If you should find any defect on the spiral winding and blades with worn and nicked edges, please replace with a new 9-blade roller.

Take extra care when shaving around the lips and nose.

1. Wet your face with warm water.
2. Apply shaving foam to face (Fig.8). Apply only enough to cover the skin (do not use a lot of shaving foam).
3. Remove the protective cover from the unit.
4. Push the motor power selector (Fig.9) to the desired setting.
5. Wet the shaver head (Fig.10).
6. Begin to shave quickly in any direction. Glide the razor over the skin, there is no need to add pressure. If you press too hard sometimes minor cuts, similar to razor cuts, may occur but will quickly disappear. We recommend using circular motions on the cheek area (Fig.11) and long strokes on the chin and neck.

For best results keep continuous contact with the shaver head and your skin.

Note: The first time you use the **Emjoi® RotoShave** the sensation you feel will be different from that of a razor blade or electric razor. This feeling is perfectly normal and will quickly disappear once your technique for the perfect shave has been achieved.

P. 5



7. If needed rinse shaver head during your shave.

The design is remarkable because it allows you to shave in any direction (straight down, or against the grain). For the smoothest results shave against the grain (Fig.12).

Keep the protective cap on your unit when it is not in use.

CLEANING

In all cases of care and maintenance unplug the shaver.

To prevent possible damage to the cord, do not wrap cord around the shaver.

Do not store in a damp environment.

Make sure the unit is unplugged from the adapter before cleaning.

1. Turn your unit On (Fig.13).
2. Rinse the 9-blade roller under the running water (Fig.14) for 5-8 seconds.
3. Turn the unit Off and lightly shake the **Emjoi® RotoShave** to remove excess moisture (Fig.15).
4. Wipe the body of the unit with a clean dry cloth.

Note: Do not immerse the shaver body in water on purpose. This may cause the unit to malfunction.

1. Replace the protective cap.

Any other servicing should be performed by an authorized service representative.

P. 6

REPLACEMENT

Make sure the unit is turned Off and unplugged from the adapter before replacing the 9-blade roller.

Please take extra care when replacing the 9-blade roller and not to touch the blades with your fingers as this can result in cutting the skin.

The 9-blade roller contains fragile parts. Please handle them with care.

Replace the **Emjoi® RotoShave 9-blade roller** when you find any defects on the roller or when you feel something scratching or worse shaving result. **Note: 9-blade rollers with worn and nicked edges could cause damage to the skin.**

If the Spiral Windings are broken replace cartridge immediately. Do not use the 9-blade roller if the blades or Spiral Windings are damaged.

1. Pull down the release button, on the side of the unit, while the end cap is facing up and the 9-blade roller will pop out (Fig. 16 & Fig. 17).
2. After the 9-blade roller pops out, remove it from the cylinder holding the end cap of the 9-blade roller and dispose of it (Fig.18).
3. Remove the 9-blade roller from the replacement container, by pressing the bottom with your pointer finger and catching it in the palm of your opposite hand (Fig. 19).

4. Place a new 9-blade roller into the unit until you hear a 'click' sound (Fig.20). Be sure to insert the new 9-blade roller into the unit with the thinner side going into the unit (Fig.21).
5. After placing a new 9-blade roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (Fig. 22).

P. 7

Emjoi®
ROTO SHAVE™

AP-3RS



Instruction Manual