Available Rollers

Emjoi® Rolleshave 9 Blade Rollers are available in 4 versions designed to suit your skin type:

6W Regular Skin - Bronze



8W Sensitive Skin – Silver

10W Extra Sensitive Skin – Gold



13W Extra Extra Sensitive Skin - Blue
- for acne, head shaving and other special situations.

Note: 8W Sensitive Skin roller (silver) is included with the AP-3VR package. The AP-3VRD package includes all 4 versions of rollers.

Warning / Important

- Before using your **Emjoi® Rolleshave** please read all these instructions carefully and completely.
- Use the **Emjoi® Rolleshave** only for purposes described in this instruction book.
- Please keep these instructions for future reference.
- The **Emjoi® Rolleshave** is a men's razor for shaving beards and not for the arms and legs.
- The **Emjoi® Rolleshave** is not for women.
- The **Emjoi® Rolleshave** can be used in the shower and rinsed under running tap water. Do not submerge the unit in water.
- Do not attempt to disassemble the unit by yourself.
- Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.
- **Warning:** You must use shaving gel or foam while using this unit.
- The blade is thin and precision manufactured do not press it to your skin with excessive force or hit the 9-blade roller with a sharp object.
- Household use only.
- Keep the appliance dry.
- Do not place or store the unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0˚C and 40˚C.
- Do not use or leave the unit in direct sunlight near heaters, or in hot areas.
- Do not immerse the shaver body in water on purpose. This may cause the unit to malfunction.
- **Warning:** Do not turn the end cap of 9-blade roller to the release mark while shaving as it will release the 9-blade roller.
- Do not drop the **Emjoi® Rolleshave** while your hands are lathered and wet as it can cause harm if the unit cuts your body and can cause damage to the unit.
- Take extra care when replacing the 9-blade roller as not to touch the blades with your fingers as this can result in cutting the skin.
- Do not use the 9-blade roller if the blades or Spiral Windings are damaged. If they are damaged replace immediately.
- Do not turn your unit On if the 9-blade roller is not attached.
- Do not leave the unit unattended while it is On.
- Before the 9-blade roller is removed from the shaver body, turn the unit Off.
- Do not throw or damage the unit.
- In case of malfunction, turn the unit off immediately and refrain from use.
- Do not use this unit if the 9-blade roller is damaged as this could lead to injury.
- Never use your unit if it has been damaged or submerged into water.
- Do not drop or insert anything into any openings of the unit.
- Do not use your unit outdoors.
- Do not use your unit where aerosol product is being used.
- Keep your unit out of reach of children.
- This appliance is not to be used on, by or near children or invalids.
- To prevent accidents and injury to you or damage to the unit - when your **Emjoi® Rolleshave** is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes as well as clothes, brushes, wires, cords, shoelaces etc.
- If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product
- Before rinsing the 9-blade roller under water make sure that the unit is turned On.
- Do not use benzene or other chemicals to clean the unit as this may result in damage. Clean the head under the faucet and clean the body using a damp cloth and then wipe dry.
- Rinsing the 9-blade roller under the tap before and after each use can minimize the risk of infection.
- Do not continually rub the unit on the same area or apply strong pressure.

Warranty

The **Emjoi® Rolleshave** warranty against defects in material and workmanship lasts one year from the date of purchase.

Keep original receipt for warranty service.

During this warranty period, return the product to Emjoi, Inc. with proof of purchase to FDR Station, PO Box 7406, New York, NY 10150. Emjoi will take care of repair or at their discretion, replacement of a defective unit without charge. For questions regarding this policy you may call toll free 1-888-99-EMJOI (1-888-993-6564).

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center. The manufacturers and distributors of the **Emjoi® Rolleshave** do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

Model No. AP-3VR / AP-3VRD
Patent No. 6, 055, 731
6, 305, 084

Other patents issued and pending

© Wheel Technology, Inc. 2008

w w w . e m j o i . c o m

PK-IB-EMJ-3VR-01-0

General Description

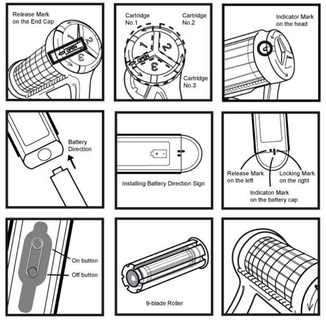

Emjoi®
ROLLeSHAVE™

The **Emjoi® Rolleshave** is a revolutionary Subsonic Power Razor that gives all the advantages of an electric razor (fast & safe) with all the benefits of a razor blade (close & smooth) in 1 amazing razor. Subsonic Gliding Technology with 300 (appr) soft strokes per second glides better on the skin and results in a closer, safer, faster and smoother shave. The **Emjoi® Rolleshave** has patented safety guards to glide over skin imperfections and spiral windings to virtually eliminate irritation. The unique Turn N'Click feature (3 cartridges on 1 carrier) allows for a fresh blade when you need it. The **Emjoi® Rolleshave** is battery operated and waterproof so you can use it anywhere.

Before using your Emjoi® Rolleshave, please read this instruction manual carefully and completely.

Installing the Battery

1. Remove the bottom cap of the handle by turning it to the left until the Indicator Mark on the bottom cap matches to the Release Mark on the handle and then pull it out (fig.1).
2. Insert one AAA battery in the battery compartment, following the battery direction sign (fig. 2) as imprinted on the handle, and then close the bottom cap by turning the bottom cap to the right. The Indicator Mark on the bottom cap matches to the Locking Mark on the handle (fig.3).
3. Turn the unit On by pressing the On button (top button) at the front of the handle (fig.4).
4. After shaving, press the Off button (bottom button) to turn Off the unit (fig.5).

To Select Cartridge

1. Select cartridge according to your needs by turning the 9-blade roller to the appropriate cartridge No."1", "2", "3" (fig.6).
2. You'll hear a "click" sound for every turn you select the cartridge from the 9-blade roller the Cartridge Button matches to the Indicator Mark on the head.

Shaving

The **Emjoi® Rolleshave** 9-blade roller is made of patented razor blades. Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.

Important: You must use shaving gel or foam while using this unit. Dry shaving is forbidden.

Important: Please confirm no malfunction on the 9-blade roller before use. If you should find any defect on the spiral winding and blades with worn and nicked edges, please replace with a new 9-blade roller.

Important: Do not continually rub the unit on the same area or apply stong pressure.

Important: Be careful not to drop the Emjoi® Rolleshave while your hands are lathered and wet as it can cause harm if the unit cuts your body and can cause damage to the unit.

The Emjoi® Rolleshave is waterproof and can be used in the bath or shower.

Take extra care when shaving around the lips and nose.

1. Using warm water, moisten your face slightly with your hands.
2. Apply a little bit of shaving foam to the face (fig. 7) – just enough to cover the skin (do not use a lot of shaving foam).
3. Turn the razor roller to the desired cartridge (fig 8). Each razor roller contains 3 separate blades (1, 2, 3). When you are finished using blade 1 Turn N'Click to blade 2 for a fresh blade and then to blade 3 until you have completed the razor roller. To change the razor roller please see **Replacement**.
4. Turn On the Subsonic Power by pressing the top button (fig. 9).
5. Moisten the head of the **Emjoi® Rolleshave** under running water (fig. 10).
6. Since this is a subsonic Power Razor we recommend using a technique similar to that of an electric razor.



7. Begin to shave by moving the **Emjoi® Rolleshave** up and down in quick strokes – not like a regular manual razor (fig. 11). The Lifting Finger Technology lifts and positions hair to the optimal 90° angle for the closest shave in a single stroke.
8. After moving up and down in quick strokes move the **Emjoi® Rolleshave** left to right in quick strokes – exactly the same method you would use if using an electric razor (fig. 12).
9. The **Emjoi® Rolleshave** offers all the safety advantages of an electric razor and the closeness of a manual razor.
10. **For best results keep continuous contact with the shaver head and your skin.**
11. When finished shaving, turn Off the unit and clean the unit see **Cleaning**.

Cleaning

1. Turn On the Subsonic Power by pressing the top button (fig. 13).
2. Rinse the **Emjoi® Rolleshave** under running water for 10 seconds (fig. 14). The Subsonic Power with 300 (appr) strokes per second will clean the blade.
3. Turn Off and lightly shake to remove excess moisture (fig. 15).
4. Wipe the body of the unit with a clean dry cloth .

Note: Do not immerse the unit in water on purpose. This may cause the unit to malfunction.

Replacement

Make sure the unit is turned Off before replacing the 9-blade roller (see **Available Rollers**).

Please take extra care when replacing the 9-blade roller and not to touch the blades with your fingers as this can result in cutting the skin.

The 9-blade roller contains fragile parts.

Please handle them with care.

Replace the **Emjoi® Rolleshave** 9-blade roller when you find any defects on the roller or when you feel something scratching or worse shaving result.

Note: 9-blade rollers with worn and nicked edges could cause damage to the skin.

If the Spiral Windings are broken replace cartridge immediately.

Do not use the 9-blade roller if the blades or Spiral Windings are damaged.

1. Turn the end cap of the 9-blade roller counter clockwise until it reaches the release mark between cartridges "1" and "3", where it says OPEN (fig 16).
2. After the 9-blade roller pops out, remove it from the cylinder holding the end cap of the 9-blade roller and dispose of it (fig.17).
3. To remove the 9-blade roller from the replacement container, push the raised button in, to release the 9-blade roller (fig.18).
4. Place a new 9-blader roller into the unit by matching the release mark, where it says OPEN, on the 9-blade roller with the mark indicator on the cylinder, pushing the roller in to the cylinder and then turning it counter clockwise to cartridge No. 1 position.
5. After placing a new 9-blade roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (fig. 19).