

Exfoliation Attachment (for model AP-3VLX)

Interchangeable exfoliation roller is designed for exfoliating skin. The roller contains 3 different exfoliation cartridges:

Cartridge 1 : For facial & sensitive areas


Cartridge 2 : For body

Cartridge 3 : For rough skin

Note: Exfoliation roller with worn and nicked edges could cause damage to skin.
Do note use the exfoliation roller when you found worn and nicked edges on the cartridge or roller.
Do note use the exfoliation roller when it is damaged.

1. Make sure the unit is turned Off before inserting the exfoliation roller.
2. Remove the 9-blade roller from the unit and replace with the exfoliation roller. Replacing the exfoliation roller is similar as the replacement of 9-blade roller, please refer to Replacement section.
3. After placing the exfoliation roller into the unit, check that it has been firmly installed with no signs of shaky or loose parts.
4. Select cartridge according to your needs by turning the exfoliation roller to the desired Cartridge No. 1, 2, 3 (fig.18).
5. Gently move the **Emjoi® Power 9** against your skin allowing the exfoliation cartridge to smooth away any dead skin (fig.19).

The exfoliation roller last 3-4 sessions depending on frequency of use and the size of the area being treated.

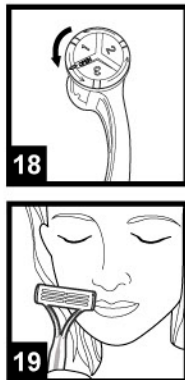

Warning / Important

- Before using your **Emjoi® Power 9** please read all these instructions carefully and completely.
- Use the **Emjoi® Power 9** only for purposes described in this instruction book.
- Please keep these instructions for future reference.
- The **Emjoi® Power 9** is a ladies' shaver for the legs, underarms and bikini line.
- The **Emjoi® Power 9** is not for men.
- The **Emjoi® Power 9** can be used in the shower and rinsed under running tap water. **Do not submerge the unit in water.**
- Do not attempt to disassemble the unit by yourself.
- Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.
- **Warning:** You must use shaving gel, foam or soap, while using this unit.
- The blade is thin and precision manufactured do not press it to your skin with excessive force or hit the 9-blade roller with a sharp object.
- Household use only.
- Keep the appliance dry.
- Do not place or store the unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0°C and 40°C.
- Do not use or leave the unit in direct sunlight near heaters, or in hot areas.
- Do not immerse the shaver body in water on purpose. This may cause the unit to malfunction.
- **Warning:** Do not turn the end cap of 9-blade roller to the release mark while shaving as it will release the 9-blade roller.
- Do not drop the **Emjoi® Power 9** while your hands are lathered and wet as it can cause harm if the unit cuts your body and can cause damage to the unit.
- Take extra care when replacing the 9-blade roller as not to touch the blades with your fingers as this can result in cutting the skin.
- Do not use the 9-blade roller if the blades or Spiral Windings are damaged. If they are damaged replace immediately.
- Do not turn your unit On if the 9-blade roller is not attached.
- Do not leave the unit unattended while it is On.
- Before the 9-blade roller is removed from the shaver body, turn the unit Off.
- Do not throw or damage the unit.
- In case of malfunction, turn the unit off immediately and refrain from use.
- Do not use this unit if the 9-blade roller is damaged as this could lead to injury.
- Never use your unit if it has been damaged or submerged into water.
- If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product
- Before rinsing the 9-blade roller under water make sure that the unit is turned On.
- Do not use benzene or other chemicals to clean the unit as this may result in damage. Clean the head under the faucet and clean the body using a damp cloth and then wipe dry.
- Rinsing the 9-blade roller under the tap before and after each use can minimize the risk of infection.

- Do not drop or insert anything into any openings of the unit.
- Do not use your unit outdoors.
- Do not use your unit where aerosol product is being used.
- Keep your unit out of reach of children.
- This appliance is not to be used on, by or near children or invalids.
- **To prevent accidents and injury to you or damage to the unit** - when your **Emjoi® Power 9** is in use, keep it away from the hair on your scalp, your eyebrows, eyelashes as well as clothes, brushes, wires, cords, shoelaces etc.
- If you have any medical conditions, issues, questions or any sensitivity whatsoever we strongly advise you to consult with your health care provider before using this product
- Before rinsing the 9-blade roller under water make sure that the unit is turned On.
- Do not use benzene or other chemicals to clean the unit as this may result in damage. Clean the head under the faucet and clean the body using a damp cloth and then wipe dry.
- Rinsing the 9-blade roller under the tap before and after each use can minimize the risk of infection.

Warranty

The **Emjoi® Power 9** warranty against defects in material and workmanship lasts one year from the date of purchase.

Keep original receipt for warranty service.


During this warranty period, return the product to Emjoi, Inc. with proof of purchase to FDR Station, PO Box 7406, New York, NY 10150. Emjoi will take care of repair or at their discretion, replacement of a defective unit without charge. For questions regarding this policy you may call toll free 1-888-99-EMJOI (1-888-993-6564).

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center. The manufactures and distributors of the **Emjoi® Power 9** do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.


Model No. AP-3VL / AP-3VLX
Patent No. 6, 055, 731
6, 305, 084
Other patents issued and pending
© Wheel Technology, Inc. 2007

www.emjoi.com

PK-IB-EMJ-3VL-01-1

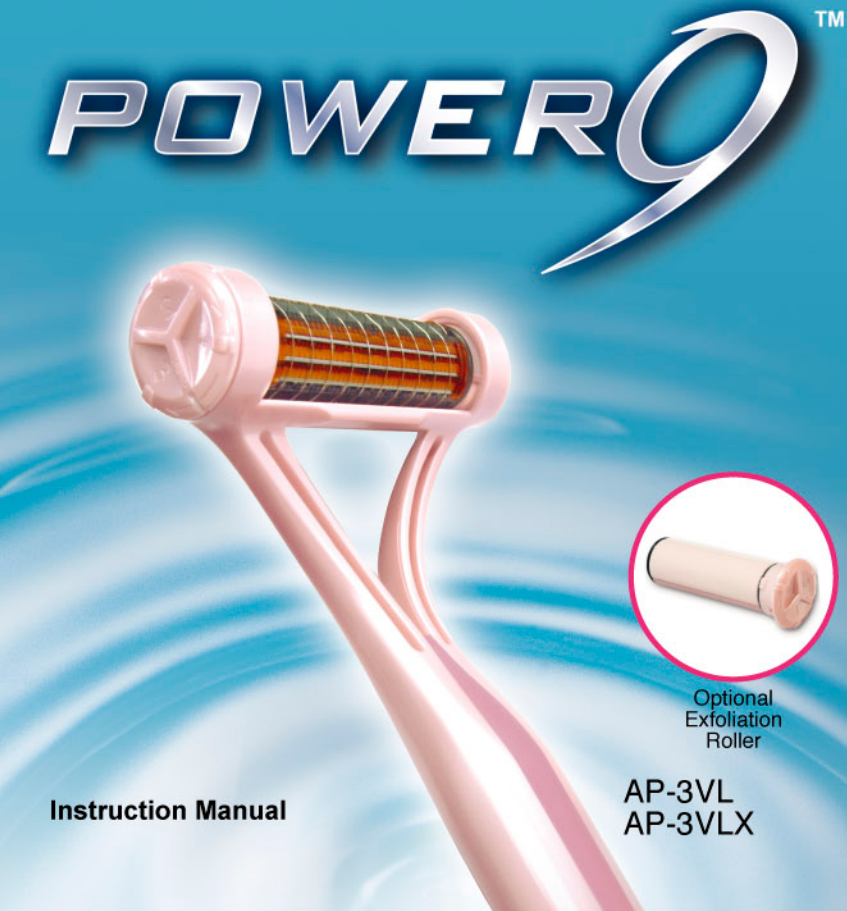

General Description

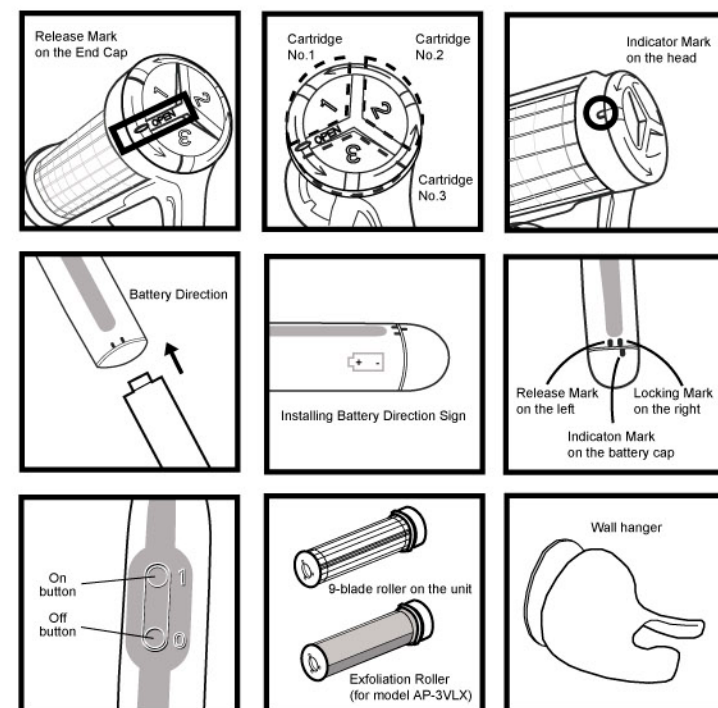

The **Emjoi® Power 9** is the only ladies razor with 9 multi-angled blade cartridges with Patented Safety Guard System coupled with state of the art Spiral Windings to prevent cuts, nicks, irritation and scratches. It has 3 sets of 3 patented multi angle blades built in so a replacement is always ready when you need it.

This instruction manual is applicable to both models AP-3VL and AP-3VLX.




Before using your **Emjoi® Power 9**, please read this instruction manual carefully and completely.

Instructions For Use

1. Remove the bottom cap of the handle by turning it to the left until the Indicator Mark on the bottom cap matches to the Release Mark on the handle (fig.1).
2. Insert one AAA battery in the battery compartment. Installing Battery Direction Sign (fig.2) is imprinted at the left bottom side of the handle and then close the bottom cap by turning the bottom cap to the right. The Indicator Mark on the bottom cap matches to the Locking Mark on the handle (fig.3).
3. Turn the unit On by pressing the On button (top button) at the back of the handle (fig.4).
4. After shaving, press the Off button (bottom button) to turn Off the unit (fig.5).

To Select Cartridge

1. Select cartridge according to your needs by turning the 9-blade roller to the appropriate cartridge No. "1", "2", "3" (fig.6).
2. You'll hear a "click" sound for every turn you select the cartridge from the 9-blade roller the Cartridge Button matches to the Indicator Mark on the head.

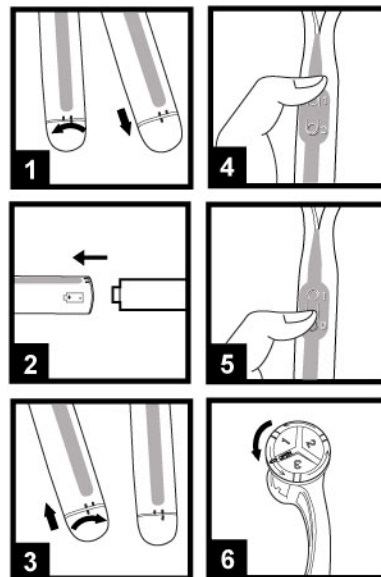

Shaving

The **Emjoi® Power 9** 9-blade roller is made of patented razor blades. Do not touch the blades with your fingers when the unit is turned Off or On as it can cut the skin.


Important: You must use shaving gel, foam or soap while using this unit. Dry shaving is forbidden.

Important: Please confirm no malfunction on the 9-blade roller before use. If you should find any defect on the spiral winding and blades with worn and nicked edges, please replace with a new 9-blade roller.

Important: Do not continually rub the unit on the same area or apply strong pressure.

Important: Be careful not to drop the **Emjoi® Power 9** while your hands are lathered and wet as it can cause harm if the unit cuts your body and can cause damage to the unit.

1. Wet area to be shaved with warm water.
2. Apply shaving gel, foam or soap on the area to be shaved (fig.7). Apply only enough to cover the skin (do not use a lot of shaving foam).
3. Turn the razor roller to the desired cartridge (fig.8). Each razor roller contains 3 separate blades (1, 2, 3). When you are finished using blade 1 Turn N' Click to blade 2 for a fresh blade and then to blade 3 until you have completed the razor roller. To change razor roller please see Replacement.
4. Turn the vibration feature On (fig.9).
5. Wet the shaver head (fig.10).
6. Since this is an electro vibro razor we recommend using a technique similar to that of using an electric razor:

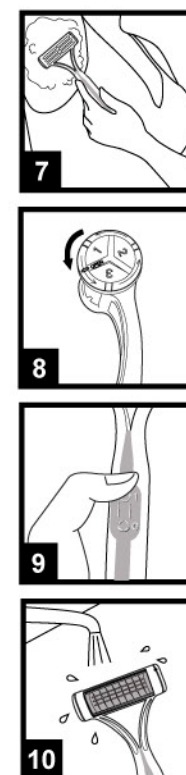


Glide the razor over the skin, there is no need to add pressure.

For best results keep continuous contact with the shaver head and your skin.

Cleaning

1. Turn the vibration feature On (fig.11).
2. Rinse the Power 9 shaver head under running water for 5-8 seconds (fig.12).
3. Turn the Vibration feature Off and lightly shake the Emjoi Power 9 to remove excess moisture (fig.13).
4. Wipe the body of the unit with a clean dry cloth.

Note: Do not immerse the unit in water on purpose. This may cause the unit to malfunction.

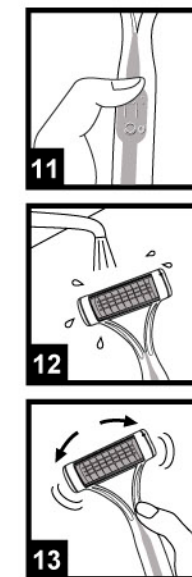

Replacement

Replacement 9-blade roller is sold separately.

Make sure the unit is turned Off before replacing the 9-blade roller. Please take extra care when replacing the 9-blade roller and not to touch the blades with your fingers as this can result in cutting the skin.

The 9-blade roller contains fragile parts. Handle them with care.

Replace the **Emjoi® Power 9** 9-blade roller when you find any defects on the roller or when you feel something scratching or worse shaving result.

Note: 9-blade rollers with worn and nicked edges could cause damage to the skin.

If the Spiral Windings are broken replace cartridge immediately. Do not use the 9-blade roller if the blades or Spiral Windings are damaged.

1. Turn the end cap of the 9-blade roller counter clockwise until it reaches the release mark between cartridges "3" and "1", where it says OPEN (fig.14).
2. After the 9-blade roller pops out, remove it from the cylinder holding the end cap of the 9-blade roller and dispose of it (fig.15).
3. Remove the 9-blade roller from the replacement container, by pressing the bottom with your pointer finger and catching it in the palm of your opposite hand (fig.16).
4. Place a new 9-blade roller into the unit by matching the release mark, where it says OPEN, on the 9-blade roller with the mark indicator on the cylinder, pushing the roller in to the cylinder and then turning it counter clockwise to cartridge No. 1 position.
5. After placing a new 9-blade roller into the unit check that it has been firmly installed with no signs of shaky or loose parts (fig.17).

